# How to activate ZMAN license code

1. Download recent ZMAN software version and labview runtime engine on http://www.zivelab.com or http://www.wonatech.com

Support – Software download menu in zivelab.com




Support-software download in wonatech.com




2. Install Labview runtime engine and ZMAN software on the PC which you want to use ZMAN. (Note: License code is per PC. You must install **the PC which you WANT to use ZMAN.**

3. Send purchase order for ZMAN license to sales@wonatech.com

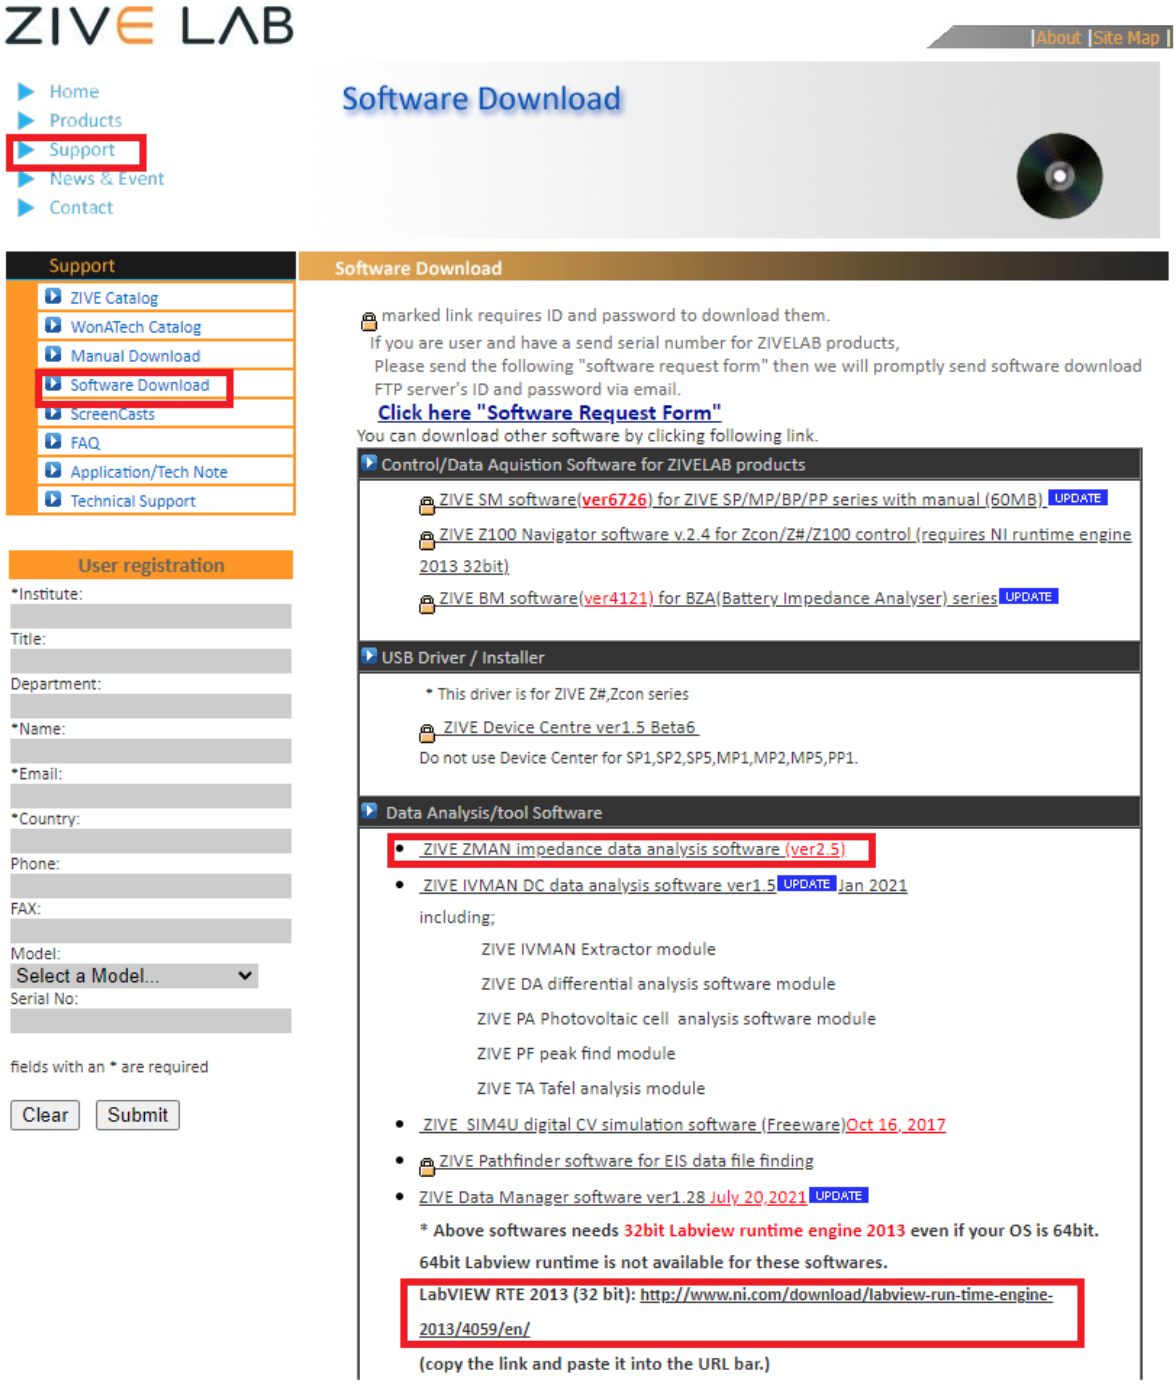4. Run ZMAN software

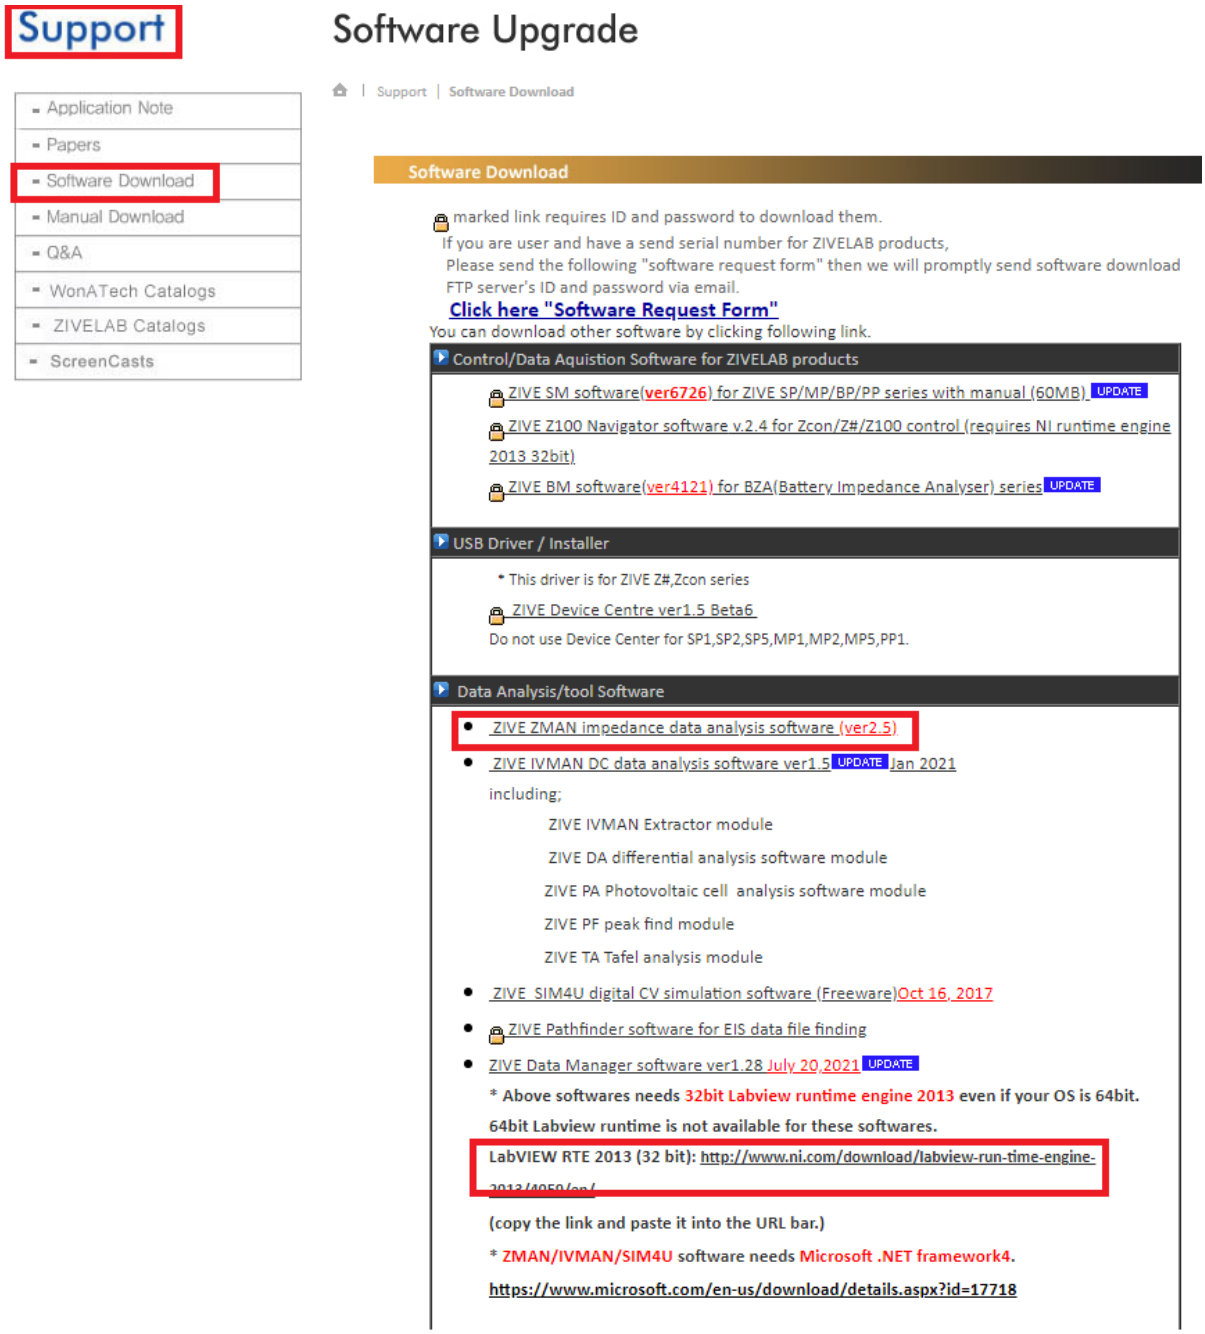


6. Click Request Code button




7. Fill the information and click “OK” button

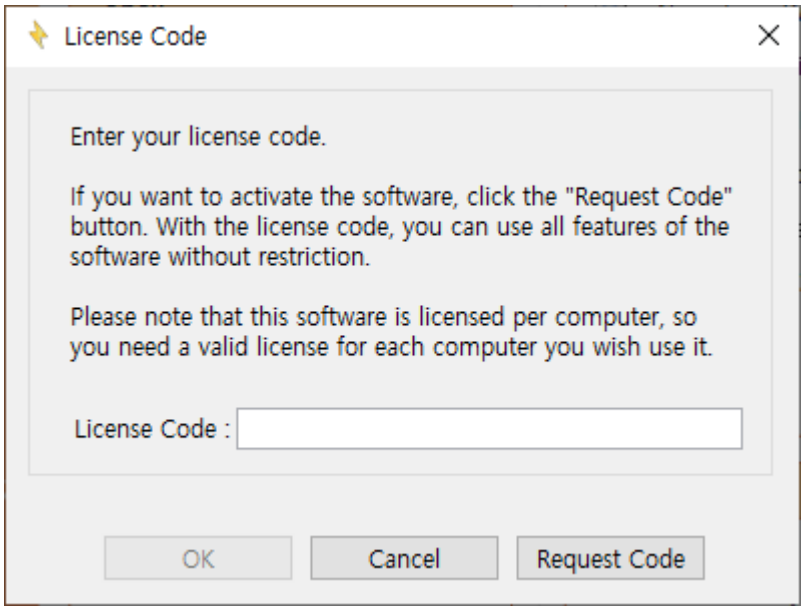


8. Click “send email” button or paste the contents using ctrl+V on your email to sales@wonatech.com

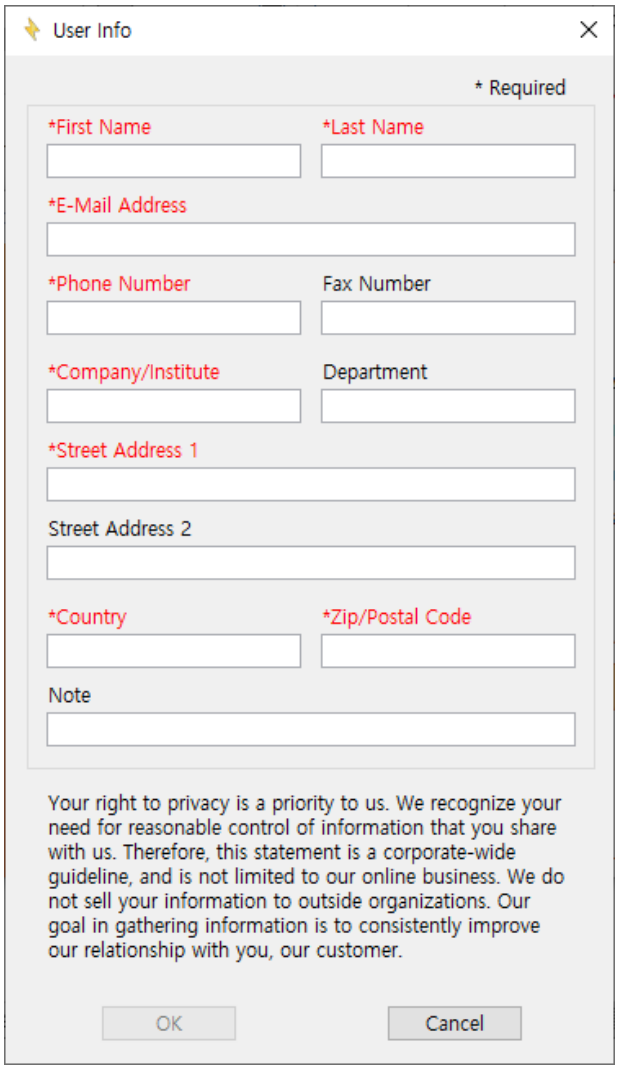


9. Wire transfer the order amount to WonATech account then we will send license code via email.

10. After receipt of license code, go to previous step 5 “Activate license code”

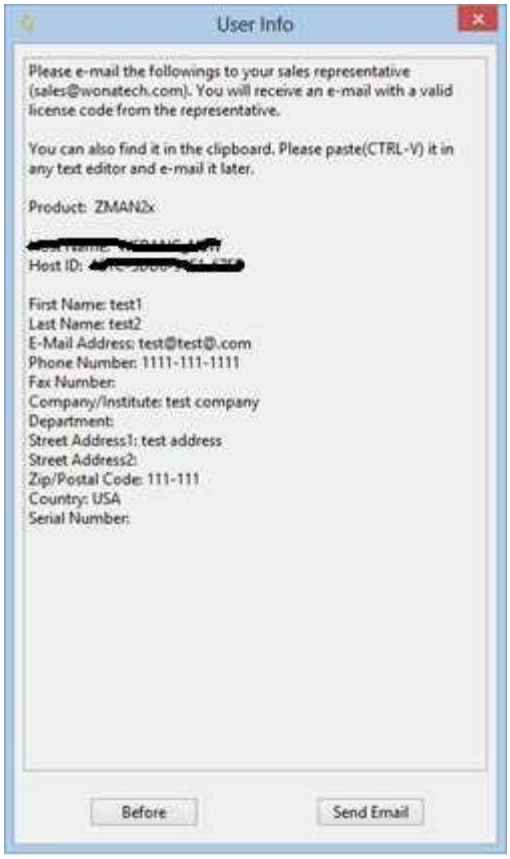11. Input license code

12. Click License code Charaters (You must click these characters)

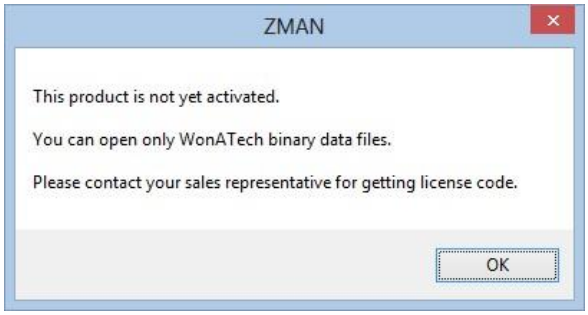13. click "OK button"

ZMAN software was activated.